
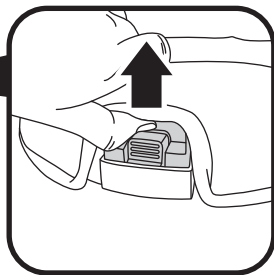


INSTRUCTION

H 360° ROTATABLE SEAT

PULL UP THE BUTTON TO RELEASE THE SEAT FRAME FROM FIXED MODE.

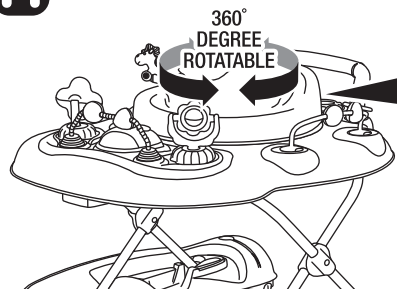


CAUTION:
THE FOOT TOY
SHOULD BE IN USE.

I THE SEAT FRAME GETS LOCKED UP AUTOMATICALLY





PRESS THE BUTTON AND TURN THE SEAT FRAME TO THE POSITION UNTIL HEARING "CLICK".

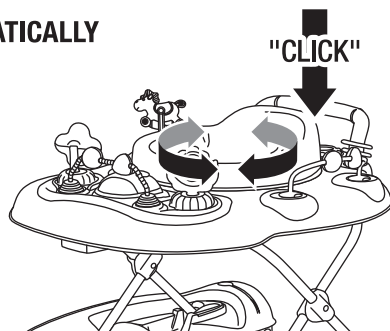


CAUTION:
THE SEAT SET MUST BE LOCKED IN THE
NON-ROTATING POSITION BEFORE USING AS THE WALKER.

J TO CONVERT INTO THE ROCKER.

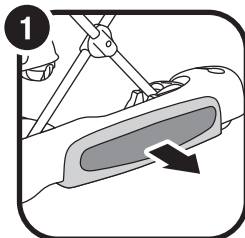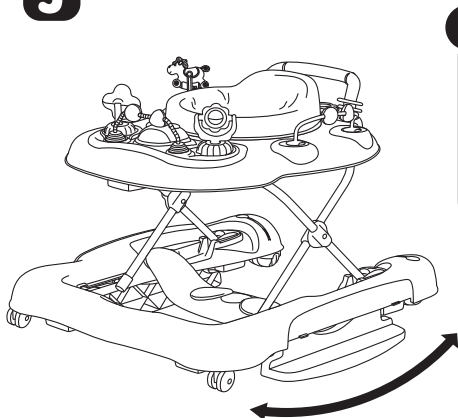

PULL OUT THE WALKER BASE.

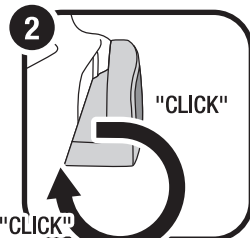

ROTATE THE WALKER BASE 90° DOWNWARD AND PUSH IT UP TO LOCK IT IN POSITION.

CAUTION:
THE FOOT TOY
SHOULD BE IN USE.




Bubbles

5 in 1 Learn2Walk Walker Carnival

MULTI-FUNCTIONAL

5in1

BABY WALKER
BABY PUSHER
BABY ROCKER
FOOT TOY
ACTIVITY CENTRE

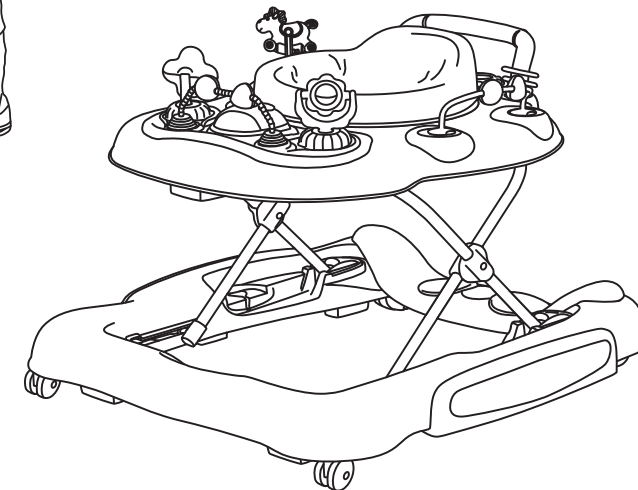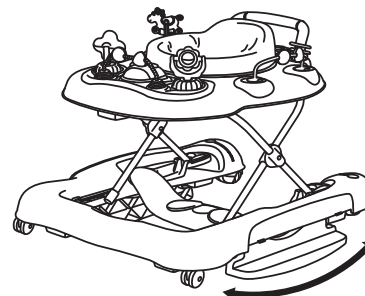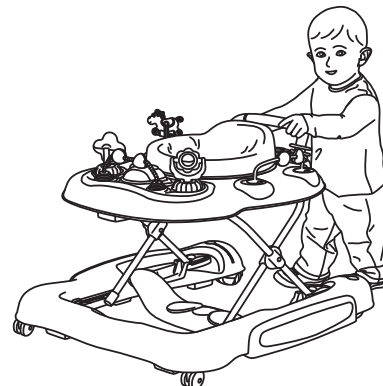

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

⚠ WARNING

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND RETAIN THEM IN A SAFE PLACE FOR FUTURE REFERENCE. READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THE WALKER. KEEP INSTRUCTIONS FOR FUTURE USE. THE CHILD MAY BE HURT IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

WARNING

“ READ THE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE. THE CHILD MAY BE HURT IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.”

NEVER LEAVE THE CHILD UNATTENDED.

ALWAYS KEEP CHILD IN VIEW WHILE IN WALKER.

THE CHILD WILL BE ABLE TO REACH FURTHER AND MOVE RAPIDLY WHEN IN THE BABY WALKING FRAME:

- 1) PREVENT ACCESS TO STAIRS, STEPS AND UNEVEN SURFACES;
- 2) GUARD ALL FIRES, HEATING AND COOKING APPLIANCES;
- 3) REMOVE HOT LIQUIDS, ELECTRICAL CABLES AND OTHER POTENTIAL HAZARDS FROM REACH.
- 4) PREVENT COLLISIONS WITH GLASS IN DOORS, WINDOWS AND FURNITURE;
- 5) DO NOT USE THE BABY WALKING FRAME IF ANY COMPONENTS ARE BROKEN OR MISSING;
- 6) THIS BABY WALKING FRAME SHOULD BE USED ONLY FOR SHORT PERIODS OF TIME (E.G. 20 MIN);
- 7) THIS PRODUCT IS INTENDED ONLY FOR A CHILD WHO CAN SIT UP BY ITSELF AND UNTIL IT IS ABLE TO WALK BY ITSELF OR WEIGHS MORE THAN 12 KG;
- 8) DO NOT USE ACCESSORIES OR REPLACEMENT PARTS OTHER THAN THOSE APPROVED BY THE MANUFACTURER.
- 9) USE ONLY ON FLAT SURFACES FREE OF OBJECTS THAT COULD CAUSE THE WALKER TO TIP OVER.
- 10) DO NOT USE THE PRODUCT IF ANY COMPONENTS ARE BROKEN OR MISSING.
- 11) DO NOT USE UNTIL BABY CAN SIT UP BY ITSELF.
- 12) CLEAN (FRICTION COMPONENTS) REGULARLY TO MAINTAIN STOPPING PERFORMANCE.
- 13) TO AVOID BURNS , KEEP THE CHILD AWAY FROM HOT LIQUIDS, RANGES, RADIATORS, SPACE HEATERS, FIREPLACES, ETC.
- 14) THE TOY INTENDED TO BE ASSEMBLED BY AN ADULT.



WARNING- STAIR HAZARD

AVOID SERIOUS INJURY OR DEATH BLOCK STAIRS/STEPS SECURELY BEFORE USING WALKER EVEN WHEN USING PARKING BRAKE.

A. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.


B. DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES ARE NOT TO BE MIXED.

INSTRUCTION

TO ASSEMBLE THE TOY TRAY SET AND THE FOOT TOY.


- BATTERY NOT INCLUDED

PLEASE FOLLOW THE INSTRUCTIONS TO REMOVE AND INSERT THE BATTERIES. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. THE PACKAGING HAS TO BE KEPT SINCE IT CONTAINS IMPORTANT INFORMATION. THE TOY CAN ONLY BE ASSEMBLED BY ADULT.

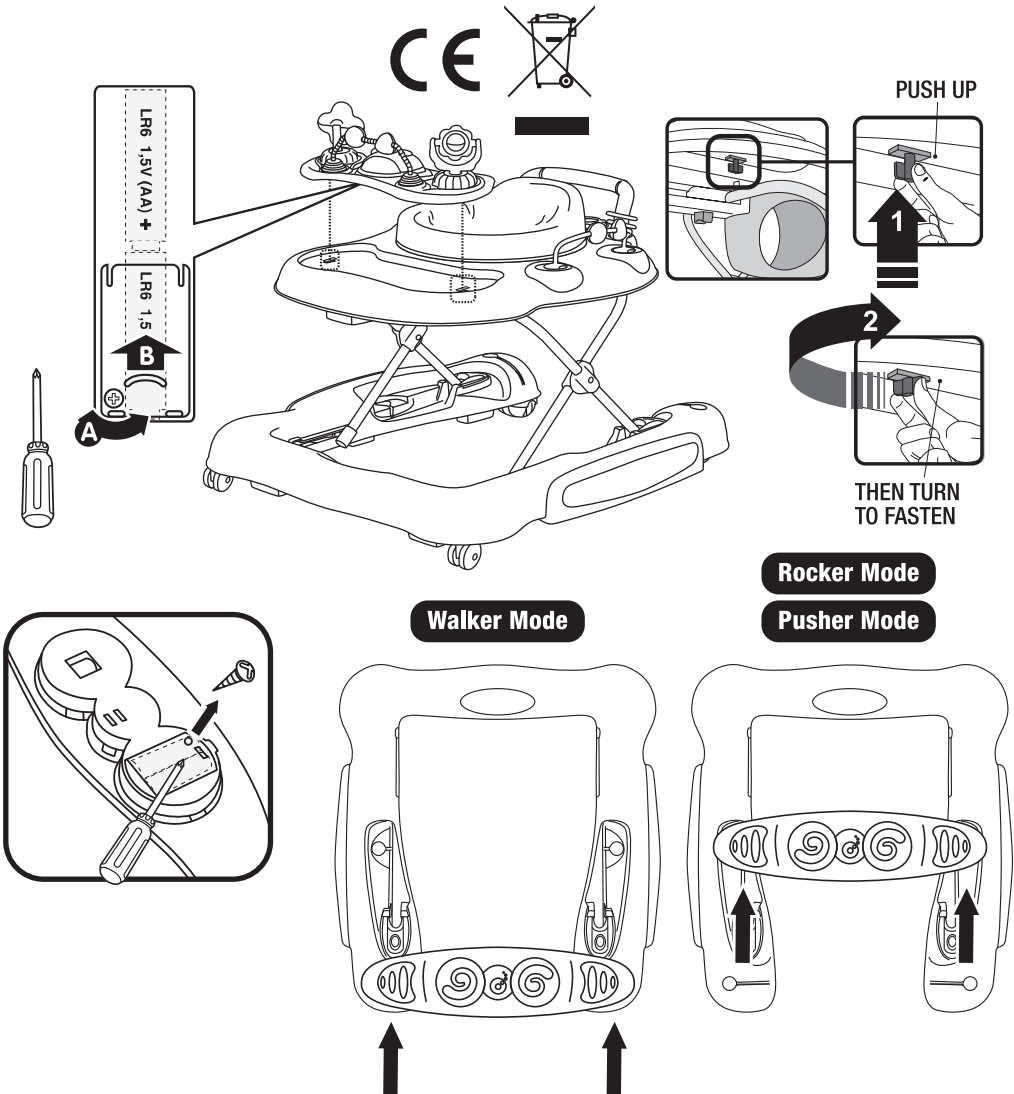


INSTRUCTION

D TO ASSEMBLE THE TOYS ON THE TOY TRAY. INSERT THE TOYS INTO THE SOCKETS.

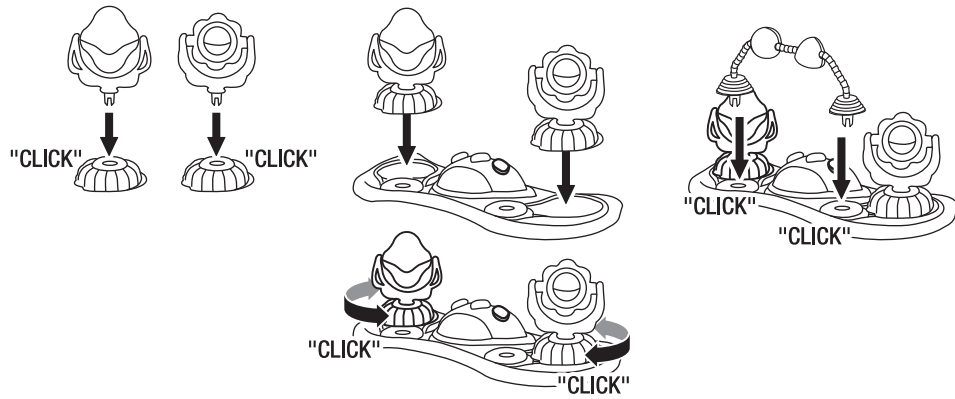


E TO ASSEMBLE THE TOYS ON THE WALKER. INSERT THE TOYS INTO THE CORRESPONDENT SOCKETS.

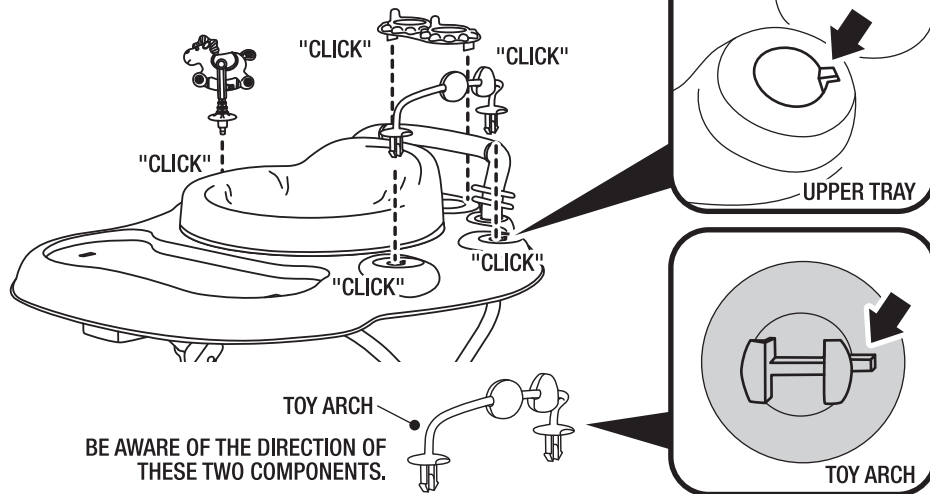

F TO ADJUST

- 1 - TO UNFOLD THE BABY WALKER, REMOVE THE TRAY FROM THE BASE.
- 2 - TO ADJUST THE HEIGHT, TURN THE BUTTON THEN PRESS IT. THE POSITION LOCKS AUTOMATICALLY WHEN YOU RELEASE THE BUTTON.
- 3 - TO FOLD THE BABY WALKER BACK DOWN: TURN THE BUTTON, PRESS IT AND LOWER THE TRAY TOWARDS THE BASE.

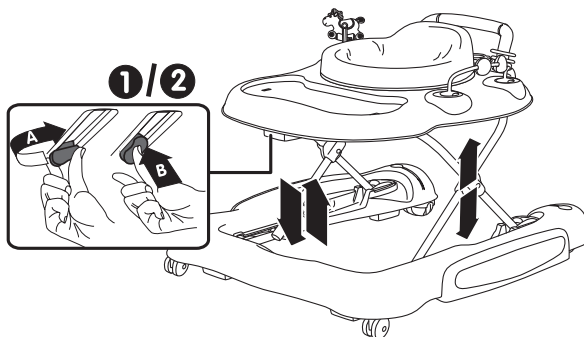


! WARNING

- C. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
 - D. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
 - E. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
 - F. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
 - G. HOW TO REMOVE AND INSERT REPLACEABLE BATTERIES.
 - H. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.
 - I. IF USING RECHARGEABLE BATTERIES, THE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.
- ### CARE AND MAINTENANCE
- 1) TO PROLONG THE LIFE OF YOUR NURSERY PRODUCT KEEP IT CLEAN AND DO NOT LEAVE IT IN THE DIRECT SUNLIGHT FOR EXTENDED PERIODS OF TIME.
 - 2) REMOVABLE FABRIC COVERS AND PLASTIC PARTS MAY BE CLEANED USING WARM WATER WITH A HOUSEHOLD SOAP OR A MILD DETERGENT. ALLOW IT TO DRY FULLY, PREFERABLY AWAY FROM DIRECT SUNLIGHT.
 - 3) CLEAN (FRICTION COMPONENTS) REGULARLY TO MAINTAIN STOPPING PERFORMANCE.

HELPFUL HINTS

IF THE WHEELS SQUEAK - USE A SILICON BASED SPRAY ENSURING IT PENETRATES THE WHEEL AND AXLE ASSEMBLY.
DO NOT DRY CLEAN, OR USE BLEACH.
DO NOT MACHINE WASH, TUMBLE OR SPIN DRY, UNLESS THE CARE LABELLING ON THE PRODUCT PERMITS THESE METHODS.
NON REMOVABLE FABRIC COVERS AND TRIMS MAY BE CLEANED USING A DAMP SPONGE WITH SOAP OR MILD DETERGENT. ALLOW IT TO DRY COMPLETELY BEFORE FOLDING OR STORING IT AWAY.
IN SOME CLIMATES THE COVERS AND TRIMS MAY BE AFFECTED BY MOULD AND MILDEW. TO HELP PREVENT THIS OCCURRING, DO NOT FOLD OR STORE THE PRODUCT IF IT IS DAMP OR WET. ALWAYS STORE THE PRODUCT IN A WELL VENTILATED AREA.
ALWAYS CHECK PARTS REGULARLY FOR TIGHTNESS OF SCREWS, NUTS AND OTHER FASTENERS - TIGHTEN IF REQUIRED. TO MAINTAIN THE SAFETY OF YOUR NURSERY PRODUCT, SEEK PROMPT REPAIRS FOR BENT, TORN, WORN OR BROKEN PARTS.



PARTS LIST

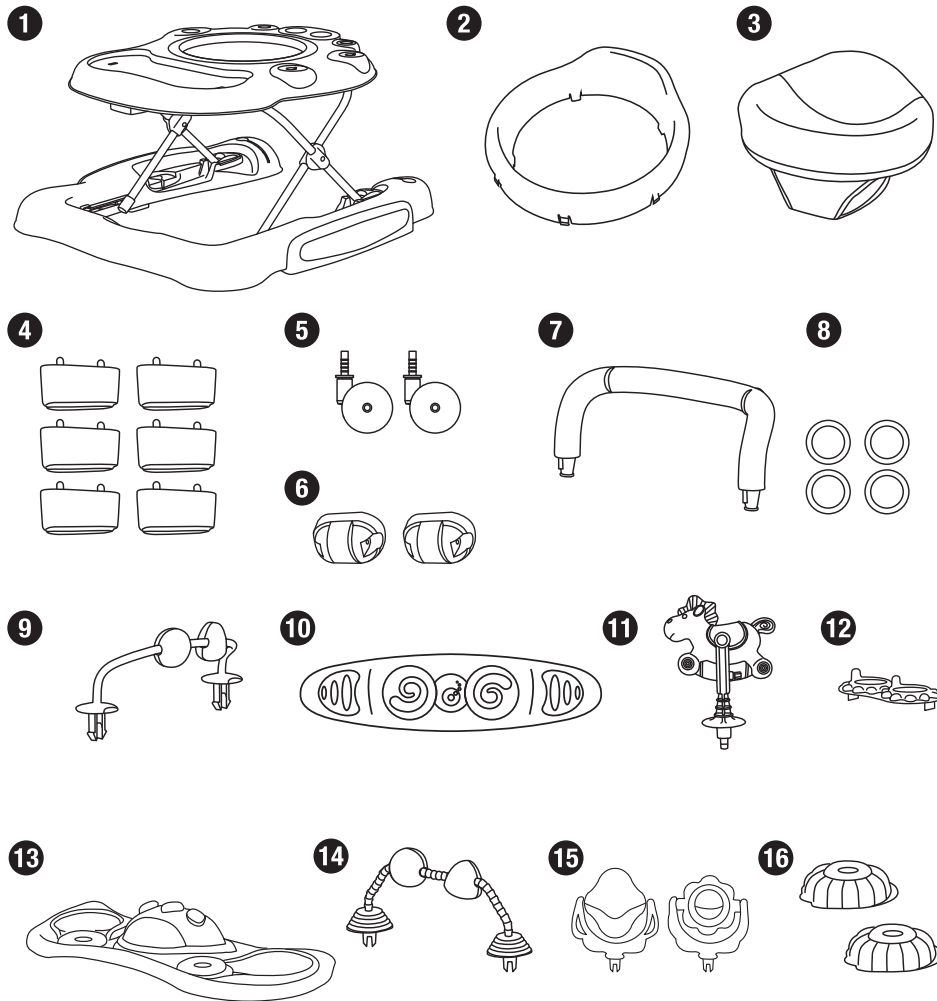


- | | | |
|-------------------------|---------------------------------|---------------------------|
| 1 WALKER FRAME | 2 SEAT FRAME | 3 SEAT PAD |
| 4 STOPPERS | 5 FRONT WHEELS | 6 REAR WHEELS |
| 7 PUSH BAR | 8 TOY RINGS | 9 TOY ARCH |
| 10 FOOT TOY | 11 TOY HORSE | 12 TOY GEAR SET |
| 13 TOY TRAY | 14 TOY ARCH FOR TOY TRAY | 15 TOY ACCESSORIES |
| 16 ROTATING BASE | | |

INSTRUCTION

A TO ASSEMBLE THE SEAT SET
FOLD THE SEAT PAD TO COVER THE SEAT FRAME.

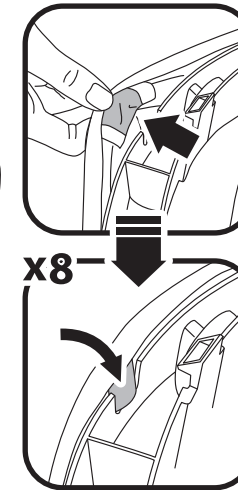
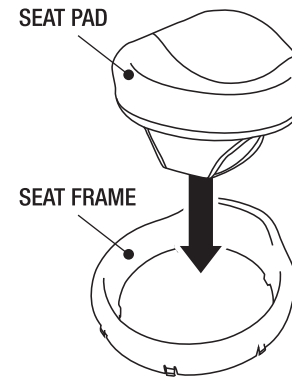


PUT THE SEAT FRAME ONTO THE UPPER TRAY.
PRESS IT UNTIL YOU HEAR "CLICK".

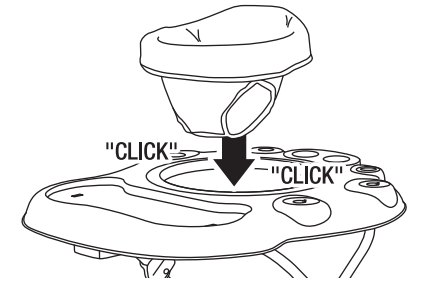


ATTENTION:
CHILDREN CAN PLAY INSIDE THE
ACTIVITY CENTRE ONLY WHEN
THE FOOT TOY IS BEING
INSTALLED INTO THE BASE.

B TO ATTACH THE STOPPERS & WHEELS

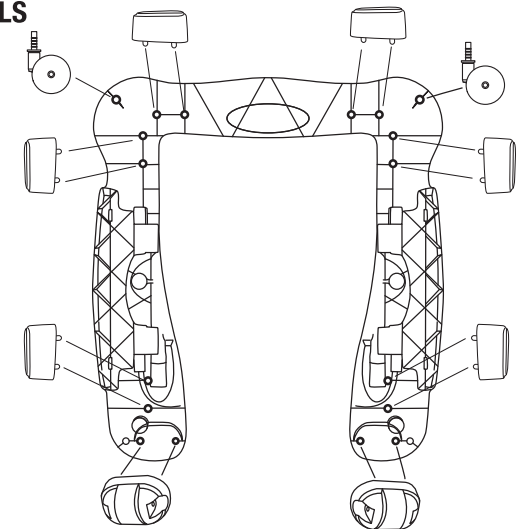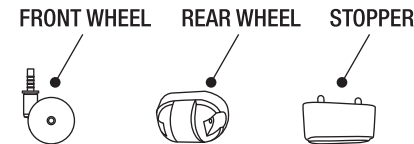


**NEVER USE THE
BABY WALKER
WITHOUT
THE WHEELS.**

C TO INSTALL THE PUSH BAR

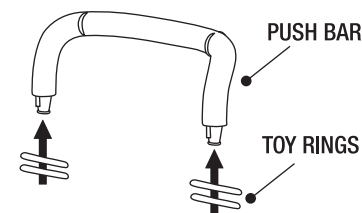

NEXT, INSERT THE PUSH BAR
INTO THE BACK OF THE WALKER.

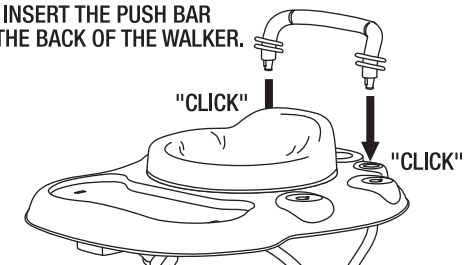

FIRST, PUT TOY RINGS AROUND THE PUSH BAR.