



Steam Sterilizer

BUE1001

Instruction
Manual

Steam Sterilizer

User Instruction

The sterilizer may accommodate 6 bottles of standard size or 4 large bottles as well as other baby feeding accessories such as feeding bowls, cups and spoons. The sterilizer could be stacked with different combination of component parts (Top lid, Attachment Basket, Main Body) to achieve multifunction for milk warming, food heating and sterilizing.

Sterilizing

1. Measure 90ml of water and pour into the storage tank of the bottom base.
2. Place the feeding bottles into the main body, small items (e.g. nipple, spoon, etc) are placed in the attachment basket.
3. Place the bottom base, main body, attachment basket and top lid sequentially (or different combination of parts depending on needs and function)
4. Plug into the main power supply, then press button to begin the sterilizing process. The light will illuminate to indicate the unit is working.

Note:

(Optional)

* To increase sterilizing time: Add more water to the storage tank of the bottom base. (max. 150ml for 15 minutes)

5. After water has been completely transforming into steam, the unit will turn off automatically.

Warm Milk

1. Pour water of 90ml into the storage tank of the bottom base.
2. Place the attachment basket onto the base, then cover it with top lid. Open the removable cover(s) on the top lid.
3. Place the bottle(s) with formula or breastmilk into the holes under the removable covers. (max. 2 bottles)
4. Plug into the main power supply, then press button to begin the warming process. The light will illuminate to indicate the unit is working.

Note:

(Optional)

* To increase or reduce warming time: Add more amount of water or reduce amount of water to the storage tank of the bottom base. (min. 70ml for 4 minutes , max. 150ml for 15 minutes)

5. After water has been completely transforming into steam, the unit will turn off automatically.

Caution: Test the temperature of milk before feeding baby.

Heat Food

1. Pour water of 90ml onto the storage tank of the bottom base.
2. Place the food with or without dish into the attachment basket.
3. Place the attachment basket onto the base, then cover it with top lid.
4. Plug into the main power supply, then press button to begin the heating process. The light will illuminate to indicate the unit is working.

Note:

(Optional)

* To increase or reduce heating time: Add more amount of water or reduce amount of water to the storage tank of the bottom base. (min. 70ml for 4 minutes , max. 150ml for 15 minutes)

5. After water has been completely transforming into steam, the unit will turn off automatically.

Caution: Test the temperature of food before feeding baby.

Care of the Sterilizer

Using filtered water for the sterilizer will reduce lime-scale build up on the heating element. The sterilizer should be de-scaled every four weeks to ensure effective working condition.

For De-scale:

Option 1


Dissolve one sachet of citric acid (10gm) with 150ml water. Pour into the storage tank of the base. Heat the sterilizer up for only 1-2 minutes. Unplug and leave the water in the unit for 30 minutes. Drain the remaining water from the base and wipe dry.

Option 2

Mix 50ml vinegar to 100ml water and pour into the storage tank of the base. Heat the sterilizer up for only 1-2 minutes. Unplug and leave water in the unit for 30 minutes until lime-scale has dissolved. Drain the remaining water from the base and wipe dry.

Warning

- Ensure sterilizer is placed on a firm level surface when in use
- When operating, the sterilizer contains boiling water and steam that escapes from the vent of the lid
- Never place item on top of the sterilizer
- Always keep out of reach of children
- Never open lid or unit during the operation of the unit
- Always unplug before pouring away the remaining water
- Never use sterilizer without water
- Never immerse bottom base into water
- Never leave any water in the storage tank when not in use.

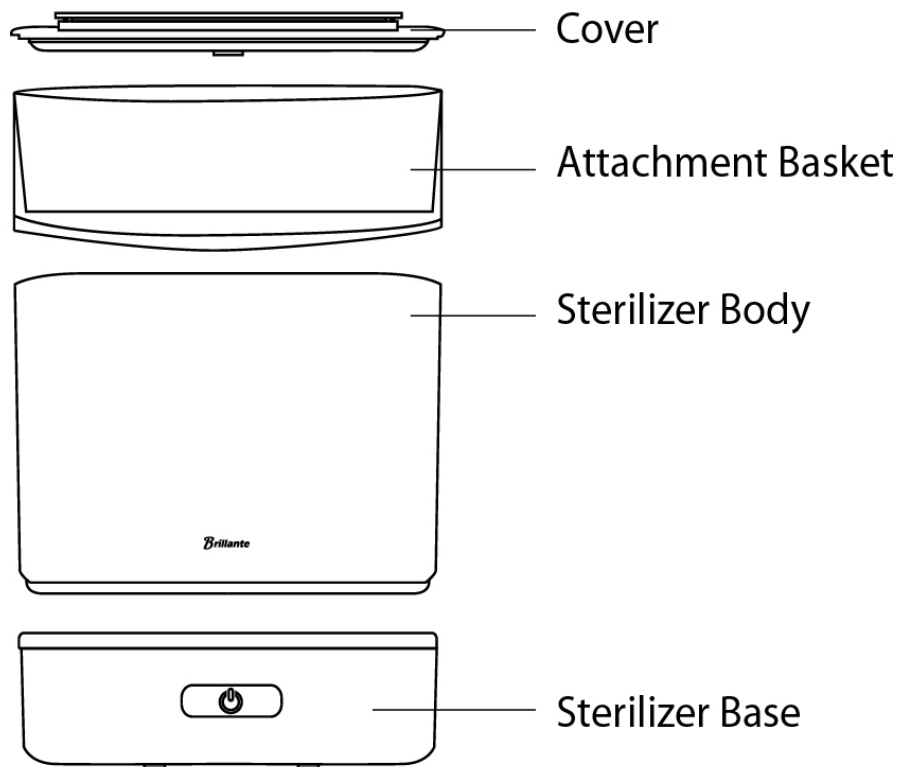



BUE 1001



BUE 1002



BUE 1003

Distributed By:



GRATO MARKETING SDN. BHD.

(977624-M)

www.grato.com.my